



## TROUBLESHOOTING GUIDE

### DF0006 – 6” Clip Fan



Problem	Possible Cause	Solution
The fan does not work.	<ol style="list-style-type: none"><li>1. Not properly plugged into the mains wall socket.</li><li>2. Not switched on</li><li>3. No electricity in the mains wall socket.</li></ol>	<ol style="list-style-type: none"><li>1. Plug in firmly.</li><li>2. Switch on .</li><li>3. Check fuse or breaker.</li></ol>
The fan is too noisy	<ol style="list-style-type: none"><li>1. Sitting unevenly</li><li>2. Not secured together correctly</li></ol>	<ol style="list-style-type: none"><li>1. Ensure fan is sitting on flat surface</li><li>2. Make sure all components are secured correctly.</li></ol>
The air speed is too fast	<ol style="list-style-type: none"><li>1. Fan setting is too high</li></ol>	<ol style="list-style-type: none"><li>1. Adjust setting accordingly</li></ol>