



**AIR COOLER  
WITH LED DISPLAY**

Model Number: IG9703

**INSTRUCTIONS FOR USE**



**Thank you for purchasing this product.  
Please read these instructions carefully before use**

# Trouble with your Air Cooler? ...

## Try our troubleshooting guide on page 8.

## If that does not solve the issue contact us ...

**IGENIX****Tel:** 01473 271 272**Email:** [info@igenix.co.uk](mailto:info@igenix.co.uk)**Fax:** 01473 270 733**Website:** [www.igenix.co.uk](http://www.igenix.co.uk)**Postal Address:**

Customer Service Department  
Pik-a-Pak Electrical Distributors  
38 Bluestem Road,  
Ransomes Europark,  
Ipswich, IP3 9RR

*When writing to or emailing us to report a fault please ensure you attach a copy of your proof of purchase. Please retain your original*

## **SAFETY INSTRUCTIONS**

 
**Important:** This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

1. Read these instructions before use.
2. Use the specified power supply.
3. Do not operate the unit with wet hands.
4. This unit is intended for indoor use only.
5. Do not unplug the power supply while machine is running.
6. Use of an extension power cord is not recommended.
7. Do not insert fingers or other objects into the unit.
8. In case of bad smell from the unit, turn off and then switch off power supply.
9. Do not cover the air outlet or air inlet.
10. If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
11. The appliance must not be located immediately below an electrical socket.
12. Do not use this appliance in the immediate surroundings of a bath, a shower or swimming pool.
13. Do not have the air inlet & outlet of the unit close to walls, curtains and other objects, or they may block the airflow and effect air supply.
14. Children should be supervised to ensure that they do not play with the appliance.
15. Do not operate the unit near flammable or explosive gas.
16. Keep the unit at least 1 meter away from TV or Radio equipment as it may cause interference.
17. Do not unplug the unit by pulling on the power cord.
18. Empty water tank and unplug the power before putting unit in storage.
19. Do not immerse the unit in water or chemical solvents.
20. Turn off machine, unplug the power, and then use dry cloth for cleaning.
21. Do not shake or move the unit when it is in use.
22. Do not insert any object, spray insecticide or chemical solvent on the unit.
23. Disconnect power supply if the unit will not be used for long time.
24. This is a Class II electrical product.
25. Do not place this unit in an inclined or other uneven service to prevent the unit from falling and causing damage to both unit & internal parts.
26. At any time the water level in the tank shall not exceed 'MAX' scale and during humidification, the total water level in the tank shall be controlled and not be below 'MIN' scale.
27. This unit is suitable for Temperature ranging from 5°C-43°C. In summer, the water in the tank may easily deteriorate and generate odour, please make sure you regularly change the water. If the Indoor temperature is below 0 in winter humidification, it is best to use warm water for humidification.

## **SPECIFICATIONS**

<b>Supply Voltage:</b>	220-240V, 50Hz
<b>Max Output:</b>	55W
<b>Max Airflow Volume:</b>	300m <sup>3</sup> /h
<b>Water tank capacity:</b>	6 Litres
<b>Net Weight:</b>	6.45kg

## IG9703 – Air Cooler with LED display

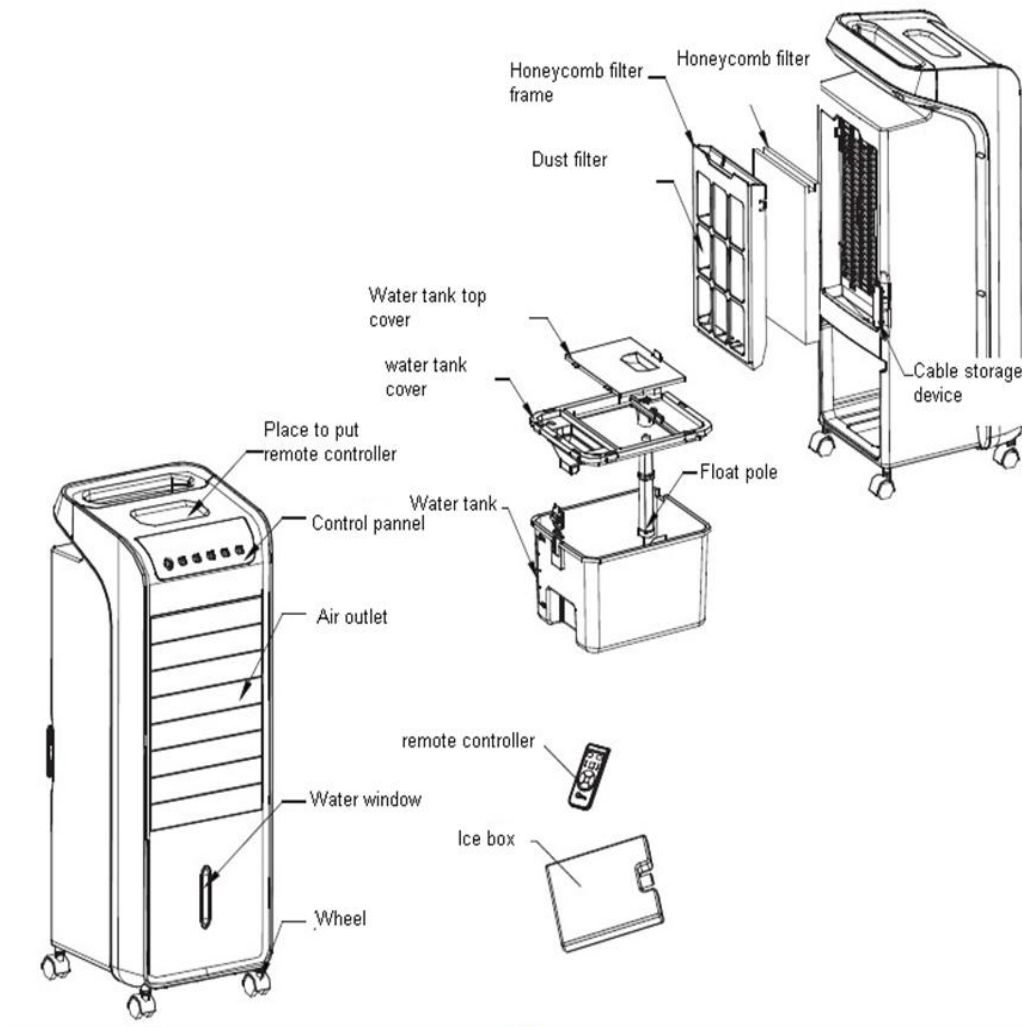

### Installation & use

1. Open the packaging and take out the air cooler.
2. Connect the wheels to the base.
3. Pull out the water tank from the body about 1/3 of the way, and pour water into the tank. If you want to remove the water tank only do so when the power has been switched off for a minimum of 2 minutes.

 
#### Attention:

- Pay attention to the water line when filling the tank.
  - The water must not be higher than the “MAX” water line. When humidifying, the water must not be lower than the “MIN” water line.
  - If you want to increase the cooling effect, you can put the ice or an ice box into the water tank
4. Inset the plug into a mains power outlet and then turn on the power button (ON/OFF).

**Attention:** After turning on the power, make sure to open the air outlet.

Do not connect the power cord with a wet hand




## IG9703 – Control Panel at a Glance

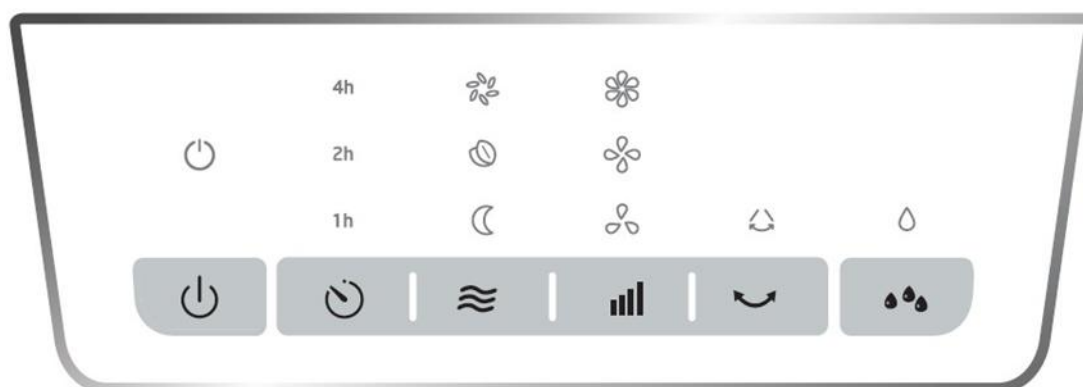

### Buttons:


   
### Indicator lights:




## Operating Instructions


Ensure that the voltage in your home matches the voltage on the rating plate before using the unit. Plug the air cooler into an electrical socket and turn on. Please note the buttons will make a noise when pressed.

1. **ON/OFF** key: Plug in the power cord; press this button to turn the appliance on / off.
2. **Oscillation** key: If this key is pressed, the air direction oscillates automatically on a horizontal basis. The oscillation indicator will illuminate. Press this key again to cancel this function.
3. **Humidification** key: Press this key to start the humidification function, and press this key again to cancel.

 
4. **Setting Mode** key: When plugged in the air cooler will default to **Normal Mode**; If the key is pressed continuously, the air speed will switch in the following manner:



 5. **Fan Speed** key: the start cooling fan is in high-level running condition; if the key is pressed continuously, the air speed will switch in the following manner:



 6. **Timer** key: When the air cooler is operating press the Timer key. The timer can be set to operate continuously from between 1 – 7 hours. The time will increase by 1 hour each time the key is pressed. The timer period will switch in the following way:

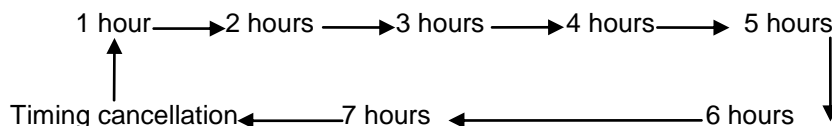

Once the timer period is set for 7 hours, if the key is pressed again it will cancel the timer function.

## Remote Controller

 
1. Open the remote controller rear cover and insert a CR2032 battery; then the remote controller can be used. It has the same function keys as the control panel
2. The effective distance for the remote controller is 6 meters.

## Ice Box


The ice box can absorb the heat in the water, which can lower the temperature of the water tank. It can make the air flow cooler.

1. Take out the ice box and put it into the freezer, until the ice box is totally frozen.
2. Put the frozen ice box into the water tank.


## Cleaning and Maintenance

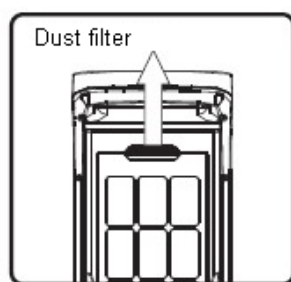


Picture 1

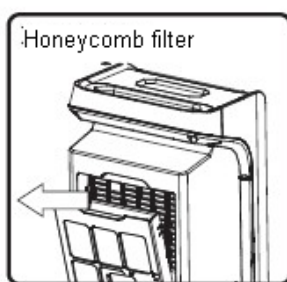 

Picture 2

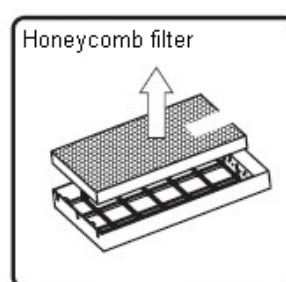 


Picture 3

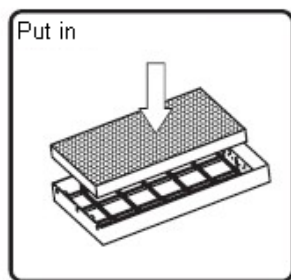 

Picture 4



 Picture 5

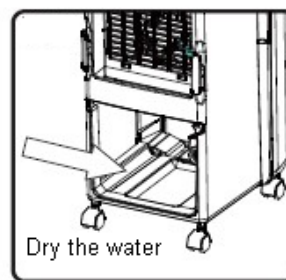


Picture 6

- Unplug the power cord, first remove the Dust Filter. With a mild detergent and a soft brush, scrub the honeycomb filter, clean with clear water and dry, and then replace it to the unit. (Picture 1)
- After cleaning the Dust filter, remove the Honeycomb filter. With a mild detergent and a soft brush, scrub the honeycomb filter, clean with clear water and dry, and then replace it to the unit. (Picture 2~4)
- Unplug the power cord, and then remove the water tank. With a towel dipped with little detergent, wipe away the scale in the water tank, clean with clear water, and then replace it to the unit. (Picture 5)
- Clean the cover with a mild detergent and a soft cloth.

### Note:

 - Due to high voltage in the unit, be sure to unplug the power cord before cleaning
- No part of the control panel should contact water

## Changing the Plug

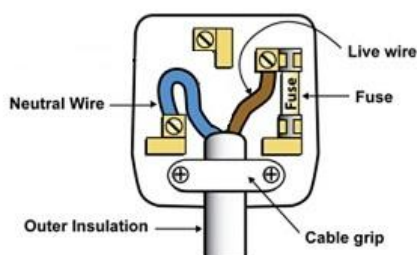

This product is double insulated and so does not require an earth.

Fit a 13A fuse in a 13A BS1363 plug. Fit the blue wire to N and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is fitted. If you remove the plug, dispose of it.

## **Troubleshooting**

<b>Trouble</b>	<b>Possible Reason</b>	<b>Solution</b>
<b>No power</b>	1. power cord is unconnected 2. honeycomb filter support is not installed correctly	1. Connect the power cord 2. Install the honeycomb filter correctly.
<b>No dust elimination</b>	1. The honeycomb filter is blocked. 2. The air inlet is blocked	1. Pull down the honeycomb filter and clean it. 2. Remove the foreign matter

## **Guarantee Information**

**2**  
**YEAR GUARANTEE**

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

The warranty **does not** cover consumable parts that require replacement under normal use or accessories. This includes beaker, belts, and accessory attachments.

1. If a fault develops within 28 days of purchase the item should be returned to the place of purchase for exchange.
2. If the fault develops after 28 days and within 24 months of purchase please contact our customer service department 01473 271 272 or write to us at the address detailed below.

Please quote the model number which begins **IG**, the 'Batch Number' beginning **'5'** and give details of the exact fault.

We will then decide whether to repair or replace the item. You will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced under guarantee within 2 years, the guarantee for the replacement item will be calculated from the purchase date of the original.

**Before calling the Customer Service number please ensure you have checked the Troubleshooting guide.**

**IGENIX**

**Tel:** 01473 271 272

**Email:** [info@igenix.co.uk](mailto:info@igenix.co.uk)

**Fax:** 01473 270 733

**Website:** [www.igenix.co.uk](http://www.igenix.co.uk)

**Postal Address:**

Customer Service Department  
Pik-a-Pak Electrical Distributors  
38 Bluestem Road,  
Ransomes Europark,  
Ipswich, IP3 9RR

*When writing to or emailing us to report a fault please ensure you attach a copy of your proof of purchase. Please retain your original*



## **Disposal Information**

**Disposal of old electrical appliances** The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste. Old appliances must be collected separately in order to optimise the



recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



**View the range online at [www.igenix.co.uk](http://www.igenix.co.uk)**

# **IGENIX**

Distributed by Pik-a-Pak Home Electrical  
38 Bluestem Road, Ransomes Europark, Ipswich. IP3 9RR Tel: 01473 271 272