

## Fitting a Lateral Rail


(BUR)



Parts you should have included in the pack are :  
 2 x Lateral Rail Bars  
 2 x Lateral Rail End Rail  
 1 x Pack of 4 Shelf Clips




Firstly locate the 4 shelf lugs into the laddering in the 4 corners of the cupboard. Ensure they are all fitted at the same height, you can check this by counting the slots in the laddering

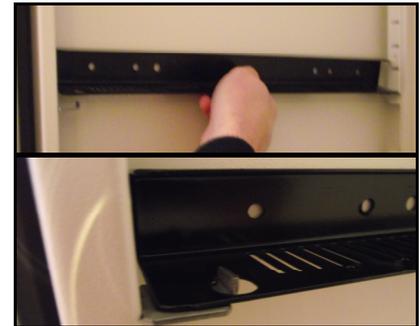

Place the lateral rail ends onto the shelf clips on each side of the cupboard



Holding one of the bars with the short lip facing you rotate the bar away from you so that the flat edge of the plastic locator in each end is facing upwards. Then insert the bar into the rear of the end rail on the left hand side.

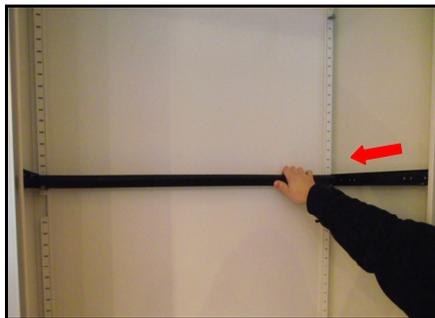

You can then insert the bar into the laddering in the 4 corners of the cupboard. Ensure they are all fitted at the same height, you can check this by counting the slots in the laddering



Lock this in place by rotating the bar towards you.



Holding the remaining bar with the lip facing away from you rotate the bar towards you, again so that the flat edge of the plastic locators is facing upwards. Then insert the bar into the left hand end rail as far back as possible.



This should allow you to slot the bar into the front of the right hand end rail. Then pull the left hand side forward so it is parallel with the back bar.



Then you can slide the left hand side forward to the front and lock into place by rotating the bar away from you.

*Should you need to adjust the rails to accommodate different size files, rotate the front bar towards you and push backward to the desired position, then lock back into place by rotating it away from you.*